

Care Card™

Saxophone

DAILY

1. While assembling your instrument, handle it by the bell.
Handling it anywhere else can affect the adjustment of your instrument.
2. Gently wipe finger prints from the keys and the body with a soft cloth.
3. Empty the water from the inside of the instrument. Swab the inside with a sax swab.
4. Scrub mouthpiece out with mouthpiece brush and warm soapy water.

WEEKLY

1. Use the neck cleaner to clean the neck of the sax.
2. Clean and grease the neck cork with a dab of cork grease.

YEARLY

1. Bring your instrument to a qualified repair technician for a professional regulation and lubrication.

SUPPLIES NEEDED

Soft Cloth, Sax Swab, Neck Cleaner, Cork Grease.



Copyright © 1985 - 2004 MusiCare Productions, All rights reserved.